


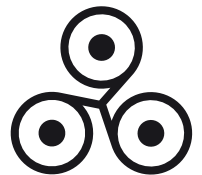

icklebubba

Globe User Guide



Contents

Page 03
What's Included?

Page 04
Unfolding

Page 05
Folding

Page 06
Using the breaks/bumper bar

Page 07
Using the harness/Backrest
adjustment

Page 08
Removing the canopy


Page 09
Care and Maintenance

Page 10
Warnings

Page 11
Warranty Information

**IMPORTANT! KEEP THESE INSTRUCTIONS FOR FUTURE REFERENCE
WARNING! BEFORE USE, REMOVE AND DISPOSE OF ALL
PLASTIC BAGS AND PACKAGING MATERIALS AND KEEP THEM OUT
OF REACH OF CHILDREN.**


What's Included

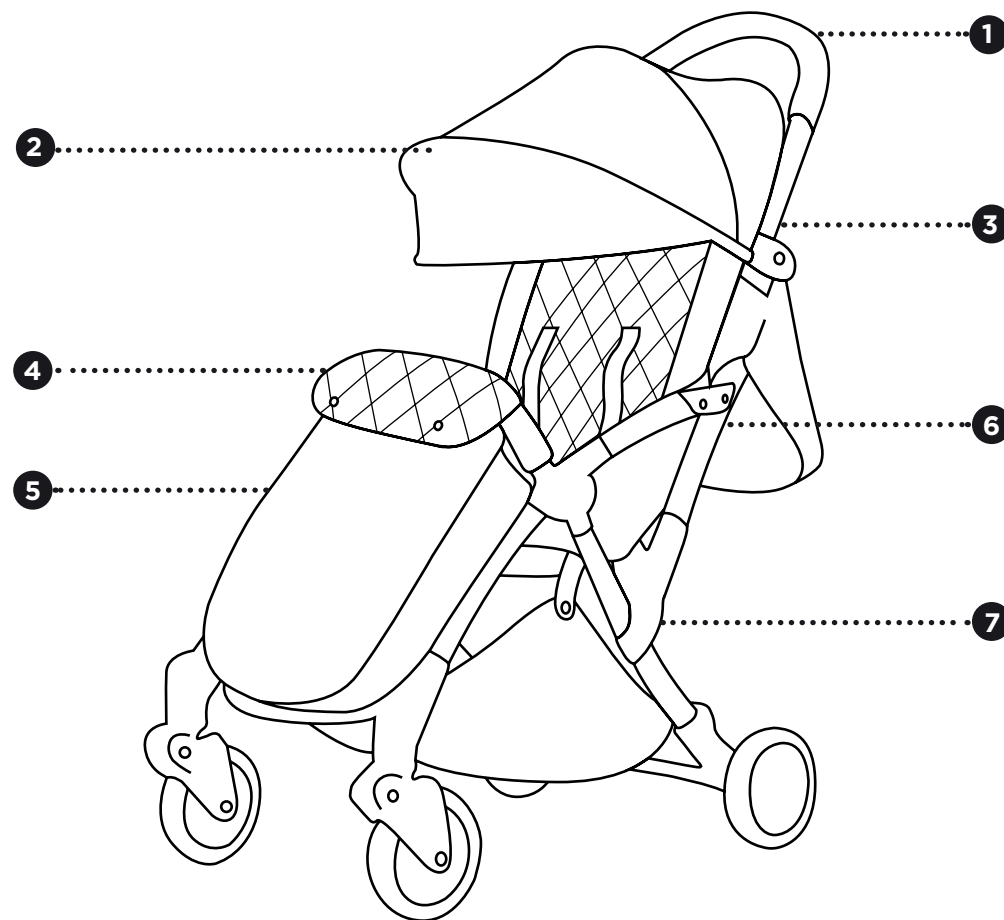

- 1 Stroller
- 2 Canopy/Hood
- 3 Raincover
- 4 Bumper Bar
- 5 Footmuff *
- 6 Cup Holder *
- 7 Carry Bag *
- 8 Buggy Organiser *

* Optional purchase

Open me up

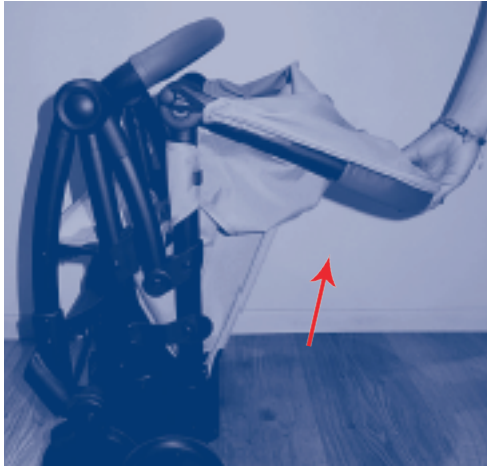

1. Begin opening the stroller by lifting the handle upwards



2. The handle will click into place when in the correct position



3. Release the plastic safety catch located on the left side of the stroller



4. Lift the stroller to extend. Once you hear the frame click into place, the stroller is ready for use.

Fold me down



1. Before folding the stroller, close the hood by pulling it towards the handle



2. Push the buttons on either side of the handle inwards using both hands



3. With both buttons pressed, fold the handle down



4. Lift the tube positioned under the seat



5. The stroller will fold and the plastic safety catch will lock automatically

Using the breaks



1. To engage the break, press down on the clip located between the back wheels




2. To disengage, press the front of the clip, allowing the back to lift

Inserting and Removing the Bumper Bar




With the footbreak engaged, the bumper bar is attached to the corresponding slots in the front of the stroller, and removed by pressing the button lock underneath


Using the Safety Harness

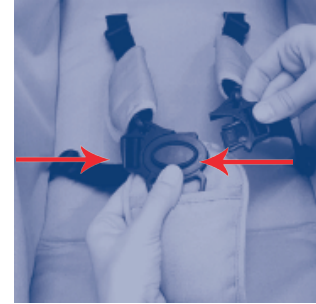

1. Connect each side strap to the crotch strap located in the centre of the seat

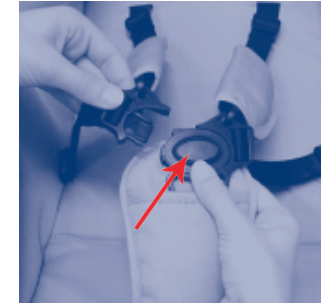

2. To disconnect the harness, press the button in the centre of the crotch strap

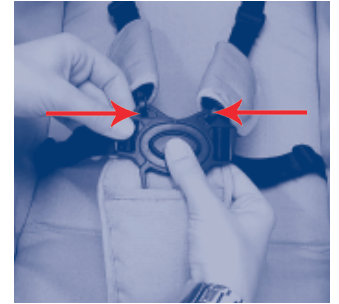


3. To unfasten the harness, release the spring clips connected to the side straps

WARNING: ALWAYS USE STROLLER WITH THE CHILD STRAPPED WITH THE SAFETY HARNESS! USE THE SAFETY HARNESS TOGETHER WITH THE CROTCH STRAP

Backrest Adjustment



1. Squeeze the adjustment clip located on the back of the seat

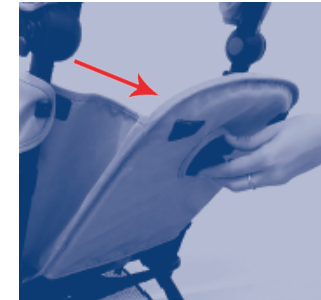

2. When the seat is in the desired position, release the clip to lock into place




3. The stroller has 3 position options: upright, reclined and sleeping

Removing the Canopy



1. Fold the canopy into it's closed position

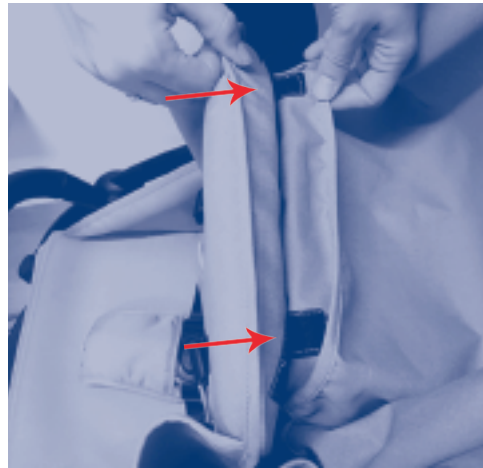

2. Unfasten the velcro located to the back, left and right of the seat



3. Unfasten the twin loops on either side of the seat near the handle buttons, then remove the canopy wires



4. Remove the canopy.

Care and Maintenance

Use a clean wet cloth to remove any surface marks from the fabric, stroller frame. Do not use abrasive products, strong detergents, bleach or solvents. Sun canopy and basket fabric parts of the stroller, can be removed. Handwash only. Maximum temperature 30 degrees.

- Always wash separately.
- Do not use strong detergents or bleach.
- Do not machine wash.
- Do not tumble dry.
- Do not iron.
- Do not dry clean.

Please refer to the care label prior to washing. Use a soft brush or cloth to clean sand and dirt off the chassis and wheels. Remember to brush away from rotating, moving or sliding parts. Use a clean, dry cloth. Use a damp sponge and some mild, non-abrasive liquid soap to remove dirt from the foam handlebar and wipe clean. Ensure all moving parts are clear of objects to ensure correct functionality. Avoid using a high pressure hose on this stroller. Do not store this stroller in a damp or hot environment. Store it in a dry place and leave unfolded when wet to prevent mould. Do not stack anything on top of this stroller.



Materials

Cover:
Frame:

100% Polyester
Aluminium

Open:

L: 101cm
H: 46cm
D: 68cm

Closed:

L: 60cm
H: 46cm
D: 25cm

WARNING

Read these instructions carefully before use and keep them for future reference. Your child's safety may be affected if you do not follow these instructions:

This stroller is intended for children from birth to 36 months and weighing a maximum of 15kgs

Use the baby stroller for only one child at a time, and make sure it is fully unfolded and locked before you put your child in it.

WARNING Always use the crotch strap in combination with the waist belt.

WARNING Remember to use the parking brake when not in use, even when stopping for just a few seconds.

WARNING Please keep your child away from all the moving parts when folding, unfolding or adjusting the stroller.

WARNING To avoid the risk of suffocation, keep all plastic packaging and materials out of reach from children.

WARNING This product is not suitable for running or skating.

WARNING Only use original accessories and manufacturer approved parts. The use of non-approved replacement parts or accessories may cause damage or make your product unsafe.

WARNING It may be dangerous to leave your child unattended.

WARNING Do not add a mattress to the stroller.

WARNING Use the harness at all times.

WARNING Any load attached to the handle affects stability of the stroller.

WARNING Check the stroller body or seat unit attachment devices are correctly engaged before use.

WARNING Do not use if any part of the product is broken, torn or missing.

WARNING Never lift or carry the stroller with a child in it. Use caution when going up and down uneven surfaces or unstable areas.

WARNING Keep away from fire and other sources of strong heat.

WARNING The maximum hold of the basket is 5kgs.

WARNING Store in a safe place away from children. .

THIS BABY STROLLER HAS BEEN APPROVED IN ACCORDANCE TO EN1888:2012

icklebubba

PRODUCT WARRANTY

Please retain your receipt and keep it with this User Guide for future reference.
(Failure to produce proof of purchase could affect your warranty)

Don't forget to register online today at:
www.icklebubba.com/warranty

Warranty Term

Stroller frame - 2 years from purchase date

Wheels - 1 year from purchase date

Fabrics - 6 months from purchase date

(Seat fabrics and hood)

Register within 28 days of purchase for a FREE 4 Year Extended Warranty

To activate your FREE 4 year warranty, register online and keep your proof of purchase for any future claim. If you register within 28 days of purchase we will extend your standard warranty to 4 years from the date of purchase at no extra cost.

What Your Warranty Does Not Cover

Damage caused by normal wear and tear, accidental damage, improper use and damage caused by negligence, misuse and by not following the maintenance instructions.

The warranty is not valid in the following situations:

In case of use or purpose other than described in the instruction manual.

If the product is submitted for repair through a retailer/distributor that is not approved or authorised by us.

If repairs have been carried out by third parties or a retailer who is not authorised or approved by us.

If you have purchased your product over the internet from an unauthorised reseller.

Where Your Warranty Applies

Your warranty applies in the country of purchase only. The warranty applies to the first owner and is non transferrable.

What to Do in Case of Defects

If you feel there is a problem with your ickle bubba product then please contact your original approved reseller.